

## PART LIST OF SALAMANDER EB-450

PART NO.	PART NAME	UNIT
1	bottom body	PC
2	bottom plate	PC
3	connect porcelain	PC
4	rubber foot	PC
5	crosshead screw	PC
6	heating indicator	PC
7	crosshead screw	PC
8	thermostat	PC
9	power indicator	PC
10	oil tray	PC
11	grid	PC
12	crosshead screw	PC
13	Fixation plate for element	PC
14	nut	PC
15	heating element	PC
16	top body	PC
17	crosshead screw	PC
18	handle	PC
19	bottom plate for top body	PC
20	thermal insulation plate	PC
21	cover for top body	PC
22	crosshead screw	PC
23	crosshead screw	PC
24	nut	PC
25	screw	PC
26	connect plate	PC
27	back body	PC
28	crosshead screw	PC
29	crosshead screw	PC
30	nut	PC
31	plain washer	PC
32	Clip	PC

## PART LIST OF SALAMANDER EB-450

PART NO.	PART NAME	UNIT
33	vertical plate	PC
34	slot plate	PC
35	bearing	PC
36	shaft	PC
37	side plate	PC
38	fixation plate	PC
39	press plate	PC
40	bolt	PC
41	nut	PC
42	spring washer	PC
43	plain washer	PC
44	slide shaft	PC
45	nut	PC
46	Bearing Base	PC
47	chain wheel and axle	PC
48	chain	PC
49	screw	PC
50	Fixation plate for chain	PC
51	Back board	PC
52	crosshead screw	PC
53	screw	PC
54	screw	PC
55	steel block	PC
56	glue base	PC
57	support rod	PC
58	plate	PC
59	wire jacket	PC
60	wire	PC
61	screw	PC
62	nut	PC

